


## FlowLogger Quick Reference Guide - Controls and Available Information

**Scottech.**  
www.scottech.net

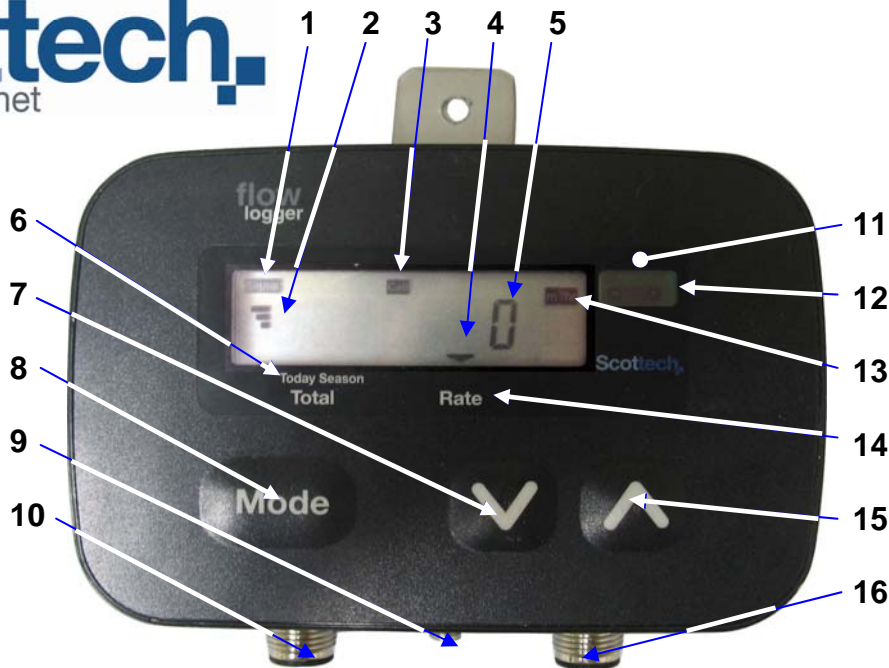

- |   |   |
|---|---|
| 1. Signal Indicator                           | 10. Power Socket *                              |
| 2. Received Signal Strength Indicator (RSSI)  | 11. Red 12v Power and Communications Light      |
| 3. Cell Communications Indicator              | 12. IrDa (infrared) Communications Port         |
| 4. Display Marker (Currently on Present Rate) | 13. Flow Rate unit's indicator (Litres per sec) |
| 5. Numeric Flow Rate (Present Rate)           | 14. Present Rate Indicator                      |
| 6. 'Today', 'Total', 'Season' Indicator       | 15. Up Button                                   |
| 7. Down Button                                | 16. Flow Sensor Socket *                        |
| 8. Mode Button *                              |   |
| 9. Antenna Socket *                           |   |

### User options

You are able to alter what the display tells you using the *Up* and the *Down Buttons*. By pressing either of these buttons repeatedly, the *Display Marker* will move left or right to indicate one of six choices, each of these choices is described below:

**Present Rate**, shows the current flow rate in litres per second as measured and recorded by the logger, indicated by the *Display Marker* being above the *Rate Indicator*.

**Total Pumped Since Meter Installed**, this should match the display on the flow meter. No *Display Marker* is displayed on screen.

**Yesterday's Total**, displays the total number of cubic metres pumped yesterday, indicated by the *Display Marker* being to the left of the *Today Indicator*.

**Today's Total**, displays the total number of cubic metres pumped today, indicated by the *Display Marker* being above the *Today Indicator*.

**Season Total**, displays the total number of cubic metres pumped for the season, indicated by the *Display Marker* being above the *Season Indicator*.

**Allowable Take Remaining**, (if programmed at installation / prior to season starting) displays the amount of cubic metres allowed for the season less the season total, indicated by the *Display Marker* being to the right of the *Season Indicator*. This option allows you to see how many cubic metres of water you have left available to take for the season.

\* For registered installer use only, if pressed or altered, assistance may be required to correct the logger

**Note:** In the instance the *Mode Button* has been pressed seven *Display Markers* will be present, simply press the *Mode Button* once more to return to the user menu. If there is more than one display marker, please contact Scottech (www.scottech.net) for assistance (03 374 2101 or 07 847 0646).